

Telephone:

Fax:

Partita IVA:

---

## System operation

- System LED location: Top of fascia panel.
- With alarm: When activated, LED flashes rapidly for 30 seconds, then flashes at regular intervals.
- Interior movement sensors deactivation switch located near steering column.
- Pressing remote control lock button activates double locking system.

## Programming

### When

- Remote control added or replaced.
- System malfunction.

### How

- Obtain all remote controls.
- Switch ignition ON and OFF 6 times within 10 seconds.

**NOTE: DO NOT remove key from ignition switch.**

- After 2 seconds indicators will flash twice.
- Programming mode activated for 2 minutes, proceed as follows:
- Press and hold unlock button.
- Press lock button 3 times.
- Release unlock button.
- Indicators will flash once to confirm correct programming.
- Repeat above procedure to program remaining key remote controls.
- After fourth key is programmed, indicators flash 3 times to confirm correct programming.
- Switch ignition ON:
- Indicators flash twice (1-3 keys programmed).
- Indicators DO NOT flash (4 keys programmed).
- Programming mode deactivated.
- Check operation of all programmed key remote controls.