

Вот коды по 2.7 CRD

P0070-AMBIENT AIR TEMPERATURE CIRCUIT SIGNAL VOLTAGE TOO HIGH	18
P0070-AMBIENT AIR TEMPERATURE CIRCUIT SIGNAL VOLTAGE TOO LOW	18
P0100-MASS AIR FLOW SENSOR SIGNAL VOLTAGE TOO HIGH	20
P0100-MASS AIR FLOW SENSOR SIGNAL VOLTAGE TOO LOW	20
P0100-MASS AIR FLOW SENSOR SUPPLY VOLTAGE TOO HIGH OR LOW	20
P0105-BAROMETRIC PRESSURE CIRCUIT SIGNAL VOLTAGE TOO HIGH	26
P0105-BAROMETRIC PRESSURE CIRCUIT SIGNAL VOLTAGE TOO LOW.	26
P0606-ECM ERROR GATE ARRAY - COMMUNICATION	26
P0606-ECM ERROR GATE ARRAY - COMMUNICATION NOT VERIFIED.	26
P0606-ECM ERROR GATE ARRAY - QUANTITY STOP	26
P0606-ECM ERROR RECOVERY HAS OCCURRED	26
P0606-ECM ERROR REDUNDANT OVERRUN MONITORING	26
P1206-CALCULATED INJECTOR VOLTAGE TOO HIGH.	26
P1206-CALCULATED INJECTOR VOLTAGE TOO LOW	26
P1601-CAPACITOR VOLTAGE 1 VOLTAGE TOO HIGH	26
P1601-CAPACITOR VOLTAGE 1 VOLTAGE TOO LOW.	26
P1606-AFTER RUN SHUT OFF ERROR-INJECTION POWERSTAGE	26
P1606-AFTER RUN SHUT OFF ERROR-ZERO QUANTITY	26
P1608-A/D CONVERTER ERROR APP SENSOR GROUND FAILURE	26
P1608-A/D CONVERTER ERROR INTERNAL FAILURE	26
P1608-A/D CONVERTER ERROR VOLTAGE FAILURE	26
P1610-VOLTAGE REGULATOR SIGNAL VOLTAGE TOO HIGH	26
P1610-VOLTAGE REGULATOR SIGNAL VOLTAGE TOO LOW	26
P1680-EEPROM PLAUSIBILITY CHECKSUM ERROR	26
P1680-EEPROM PLAUSIBILITY CODE WORD INCORRECT OR MISSING	26
P1680-EEPROM PLAUSIBILITY COMMUNICATION ERROR.	26
P1680-EEPROM PLAUSIBILITY VARIATION NUMBER ERROR	26
P1680-EEPROM PLAUSIBILITY VIN CHECKSUM ERROR	26
P1680-EEPROM PLAUSIBILITY WRITE ERROR.	26
P1685-SKIM SYSTEM INVALID SECRET KEY IN EEPROM.	26
P1685-SKIM SYSTEM WRITE ACCESS TO EEPROM FAILURE	26
P0110-INTAKE AIR TEMP SENSOR CIRCUIT SIGNAL VOLTAGE TOO HIGH	30
P0110-INTAKE AIR TEMP SENSOR CIRCUIT SIGNAL VOLTAGE TOO LOW.	33
P0115-ENGINE COOLANT TEMP SENSOR CIRCUIT SIGNAL VOLTAGE TOO HIGH . . .	35
P0115-ENGINE COOLANT TEMP SENSOR CIRCUIT SIGNAL VOLTAGE TOO LOW. . .	38
P0190-FUEL PRESS SENSOR CIRCUIT MAF SIGNAL VOLTAGE TOO HIGH.	40
P0190-FUEL PRESS SENSOR CIRCUIT MAF SIGNAL VOLTAGE TOO LOW	44
P0190-FUEL PRESS SENSOR CIRCUIT MAF SUPPLY VOLTAGE TOO HIGH OR LOW. .	46
P0201-CYLINDER 1-INJECTOR CIRCUIT CURRENT DECREASE	47
P0201-CYLINDER 1-INJECTOR CIRCUIT LOAD DROP	47
P0201-CYLINDER 1-INJECTOR CIRCUIT OVERCURRENT HIGH SIDE.	47
P0201-CYLINDER 1-INJECTOR CIRCUIT OVERCURRENT LOW SIDE	47
P0202-CYLINDER 2-INJECTOR CIRCUIT CURRENT DECREASE	47
P0202-CYLINDER 2-INJECTOR CIRCUIT LOAD DROP	47
P0202-CYLINDER 2-INJECTOR CIRCUIT OVERCURRENT HIGH SIDE.	47
P0202-CYLINDER 2-INJECTOR CIRCUIT OVERCURRENT LOW SIDE	47
P0203-CYLINDER 3-INJECTOR CIRCUIT CURRENT DECREASE	47
P0203-CYLINDER 3-INJECTOR CIRCUIT LOAD DROP	47

P0203-CYLINDER 3-INJECTOR CIRCUIT OVERCURRENT HIGH SIDE.	.47
P0203-CYLINDER 3-INJECTOR CIRCUIT OVERCURRENT LOW SIDE	.47
P0204-CYLINDER 4-INJECTOR CIRCUIT CURRENT DECREASE	.47
P0204-CYLINDER 4-INJECTOR CIRCUIT LOAD DROP	.47
P0204-CYLINDER 4-INJECTOR CIRCUIT OVERCURRENT HIGH SIDE.	.47
P0204-CYLINDER 4-INJECTOR CIRCUIT OVERCURRENT LOW SIDE	.47
P0205-CYLINDER 5-INJECTOR CIRCUIT CURRENT DECREASE	.47
P0205-CYLINDER 5-INJECTOR CIRCUIT LOAD DROP	.47
P0205-CYLINDER 5-INJECTOR CIRCUIT OVERCURRENT HIGH SIDE.	.47
P0205-CYLINDER 5-INJECTOR CIRCUIT OVERCURRENT LOW SIDE	.47
P0235-BOOST PRESSURE SENSOR PLAUSIBILITY	.53
P0235-BOOST PRESSURE SENSOR SIGNAL VOLTAGE TOO HIGH.	.55
P0235-BOOST PRESSURE SENSOR SIGNAL VOLTAGE TOO LOW	.58
P0235-BOOST PRESSURE SENSOR SUPPLY VOLTAGE TOO HIGH OR LOW . . .	.61
P0243-TURBOCHARGER WASTEGATE SOLENOID CIRCUIT OPEN CIRCUIT. . . .	.64
P0243-TURBOCHARGER WASTEGATE SOLENOID CIRCUIT SHORT CIRCUIT . .	.67
P0335-CKP SENSOR CIRCUIT DYNAMIC PLAUSIBILITY	.69
P0340-CMP/CKP POSITION SENSOR CIRCUIT - CKP DYNAMIC PLAUSIBILITY. .	.71
P0340-CMP/CKP POSITION SENSOR CIRCUIT - CMP/CKP SYNC FAILURE	.74
P0340-CMP/CKP POSITION SENSOR CIRCUIT - SIGNAL FREQUENCY TOO HIGH .	.77
P0340-CMP/CKP POSITION SENSOR CIRCUIT - STATIC PLAUSIBILITY	.77
P0380-GLOW PLUG 1 CONTROL CIRCUIT - OPEN CIRCUIT.	.81
P0380-GLOW PLUG 1 CONTROL CIRCUIT - SHORT CIRCUIT	.81
P0382-GLOW PLUG 2 CONTROL CIRCUIT - OPEN CIRCUIT.	.84
P0382-GLOW PLUG 2 CONTROL CIRCUIT - SHORT CIRCUIT	.84
P0403-EGR SOLENOID CIRCUIT NEGATIVE DEVIATION	.87
P0403-EGR SOLENOID CIRCUIT OPEN CIRCUIT	.89
P0403-EGR SOLENOID CIRCUIT SHORT CIRCUIT	.91
P0460-FUEL LEVEL SENSOR CIRCUIT SIGNAL VOLTAGE TOO HIGH	.93
P0460-FUEL LEVEL SENSOR CIRCUIT SIGNAL VOLTAGE TOO LOW	.96
P0500-VEHICLE SPEED SENSOR FREQUENCY TOO HIGH	.98
P0500-VEHICLE SPEED SENSOR HIGH LEVEL DURATION.	.98
P0500-VEHICLE SPEED SENSOR PLAUSIBILITY	.98
P0500-VEHICLE SPEED SENSOR SIGNAL VOLTAGE TOO HIGH	.98
P0514-BATTERY TEMP SENSOR CIRCUIT SIGNAL VOLTAGE TOO HIGH	.101
P0514-BATTERY TEMP SENSOR CIRCUIT SIGNAL VOLTAGE TOO LOW	.103
P0520-OIL PRESS SENSOR CKT MALF SIGNAL VOLTAGE TOO HIGH	.105
P0520-OIL PRESS SENSOR CKT MALF SIGNAL VOLTAGE TOO LOW.	.108
P0520-OIL PRESS SENSOR CKT MALF SUPPLY VOLTAGE TOO HIGH OR LOW. .	.110
P0530-A/C PRESSURE SENSOR CIRCUIT SIGNAL VOLTAGE TOO HIGH	.112
P0530-A/C PRESSURE SENSOR CIRCUIT SIGNAL VOLTAGE TOO LOW	.112
P0530-A/C PRESSURE SENSOR CIRCUIT SUPPLY VOLTAGE TOO HIGH OR LOW. .	.112
P0560-SYSTEM VOLTAGE TOO HIGH	.117
P0560-SYSTEM VOLTAGE TOO LOW	.119
P1536-GENERATOR FIELD CURRENT TOO HIGH.	.119
*CHECKING THE CHARGING SYSTEM OPERATION - DIESEL	.119
P0579-S/C SWITCH SIGNAL CIRCUIT PLAUSIBILITY	.123
P0579-S/C SWITCH SIGNAL CIRCUIT SIGNAL VOLTAGE TOO HIGH	.125
P0579-S/C SWITCH SIGNAL CIRCUIT SIGNAL VOLTAGE TOO LOW	.127
P0615-STARTER RELAY CIRCUIT SHORT CIRCUIT	.129
P0620-GENERATOR FIELD CONTROL MALF BATTERY VOLTAGE DEVIATION TOO HIGH .	.131

P0620-GENERATOR FIELD CONTROL MALF BATTERY VOLTAGE DEVIATION TOO LOW . . .	131
P0620-GENERATOR FIELD CONTROL MALF BATTERY VOLTAGE TOO HIGH . . .	131
P0620-GENERATOR FIELD CONTROL MALF BATTERY VOLTAGE TOO LOW. . .	131
P0620-GENERATOR FIELD CONTROL MALF CHARGING VOLTS TOO LOW . . .	131
P0620-GENERATOR FIELD CONTROL MALF HIGH GENERATOR CURRENT . . .	131
P0620-GENERATOR FIELD CONTROL MALF OPEN CIRCUIT	131
P0620-GENERATOR FIELD CONTROL MALF SHORT CIRCUIT	131
P0641-SENSOR REFERENCE VOLTAGE A CKT VOLTAGE TOO HIGH	135
P0641-SENSOR REFERENCE VOLTAGE A CKT VOLTAGE TOO LOW	137
P0645-A/C CLUTCH RELAY CIRCUIT OPEN CIRCUIT.	140
P0645-A/C CLUTCH RELAY CIRCUIT SHORT CIRCUIT	142
P0651-SENSOR REFERENCE VOLTAGE B CKT VOLTAGE TOO HIGH.	144
P0651-SENSOR REFERENCE VOLTAGE B CKT VOLTAGE TOO LOW	146
P0685-ASD RELAY CONTROL CIRCUIT SHUTS OFF TOO EARLY	149
P0685-ASD RELAY CONTROL CIRCUIT SHUTS OFF TOO LATE.	151
P0700-TRANS CONTROL 1-2/4-5 SOLENOID CIRCUIT.	153
P0700-TRANS CONTROL 2-3 SOLENOID CIRCUIT	153
P0700-TRANS CONTROL 3-4 SOLENOID CIRCUIT	153
P0700-TRANS CONTROL INTERNAL CONTROLLER.	153
P0700-TRANS CONTROL MOD. PRESS SOLENOID CIRCUIT	153
P0700-TRANS CONTROL SHIFT PRESSURE SOLENOID CIRCUIT.	153
P0700-TRANS CONTROL SOLENOID SUPPLY VOLTAGE.	153
P0700-TRANS CONTROL TCC SOLENOID CIRCUIT	153
P0702-TRANS CONTROL ABS SENSOR MESSAGE	153
P0702-TRANS CONTROL ENGINE T-CASE SWITCH MESSAGE	153
P0702-TRANS CONTROL IMPROPER GEAR	153
P0702-TRANS CONTROL IMPROPER RATIO OR TRANSMISSION SLIPPING . . .	153
P0702-TRANS CONTROL INTERNAL SHIFTER FAILURE	153
P0702-TRANS CONTROL N2 OR N3 INPUT SENSOR CIRCUIT.	153
P0702-TRANS CONTROL TCC FAULT	153
P0703-BRAKE SWITCH SIGNAL CIRCUITS PLAUSIBILITY WITH REDUNDANT CONTACT . . .	154
P0703-BRAKE SWITCH SIGNAL CKTS PLAUS W/REDUNDANT CONTACT AFTER INITIALIZATION . . .	154
P0836-TRANSFER CASE POSITION SENSOR PLAUSIBILITY	158
P0836-TRANSFER CASE POSITION SENSOR PLAUSIBILITY 2	158
P0836-TRANSFER CASE POSITION SENSOR SIGNAL VOLTAGE TOO HIGH . . .	158
P0836-TRANSFER CASE POSITION SENSOR SIGNAL VOLTAGE TOO LOW . . .	158
P0850-P/N SWITCH PLAUSIBILITY	161
P1130-FUEL RAIL PRESSURE MALFUNCTION ACTUATOR STICKING.	163
P1130-FUEL RAIL PRESSURE MALFUNCTION LEAKAGE DETECTED.	163
P1130-FUEL RAIL PRESSURE MALFUNCTION POSITIVE DEVIATION	163
P1130-FUEL RAIL PRESSURE MALFUNCTION PRESSURE TOO HIGH-SHUT OFF . .	163
P1130-FUEL RAIL PRESSURE MALFUNCTION PRESSURE TOO LOW	163
P1130-FUEL RAIL PRESSURE MALFUNCTION SOLENOID OPEN	163
P1131-FUEL PRESSURE SOLENOID OPEN CIRCUIT	167
P1131-FUEL PRESSURE SOLENOID POWERSTAGE ERROR	167
P1131-FUEL PRESSURE SOLENOID SHORT CIRCUIT.	167
P1205-INJECTOR CLASSIFICATION ERROR	171
P1205-INJECTOR CLASSIFICATION ERROR CHECKSUM ERROR.	171
P1235-EXTERNAL FUEL QUANTITY BIT ERROR.	172
P1235-EXTERNAL FUEL QUANTITY DEMAND ERROR.	172
P1235-EXTERNAL FUEL QUANTITY PARITY ERROR	172

P1235-EXTERNAL FUEL QUANTITY TORQUE ERROR.	172
P1242-CAN BUS MESSAGE MISSING.	174
P1242-CAN BUS MESSAGE MISSING FROM TCM	174
P1242-CAN BUS MUTE	177
P1270-INTAKE PORT SWIRL ACTUATOR SHORT CIRCUIT	179
P1270-INTAKE PORT SWIRL ACTUATOR GROUND X.	181
P1270-INTAKE PORT SWIRL ACTUATOR OPEN CIRCUIT	182
P1499-HYDRAULIC COOLING FAN SOLENOID CIRCUIT OPEN CIRCUIT	184
P1499-HYDRAULIC COOLING FAN SOLENOID CIRCUIT SHORT CIRCUIT	187
P1511-BATTERY SENSE LINE 1 VOLTAGE TOO HIGH	189
P1511-BATTERY SENSE LINE 1 VOLTAGE TOO LOW	189
P1512-BATTERY SENSE LINE 2 VOLTAGE TOO HIGH	189
P1512-BATTERY SENSE LINE 2 VOLTAGE TOO LOW	189
P1605-IGNITION SWITCH PLAUSIBILITY	192
P1643-VISCOUS HEATER RELAY OPEN CIRCUIT.	194
P1643-VISCOUS HEATER RELAY SHORT CIRCUIT	194
P1651-MIL/DIAG LAMP VIA J1850 BUS IN FRAME RESPONSE ERROR	197
P1651-MIL/DIAG LAMP VIA J1850 BUS STATUS ERROR	197
P1652-J1850 COMMUNICATION BUS LOST ARBITRATION	199
P1652-J1850 COMMUNICATION BUS RECEIVE TIMEOUT	199
P1652-J1850 COMMUNICATION BUS SHORT TO GROUND	199
P1652-J1850 COMMUNICATION BUS SHORT TO VOLTAGE	199
P1652-J1850 COMMUNICATION BUS SPI ERROR.	199
P1652-J1850 COMMUNICATION BUS TRANSMIT BUFFER OVERRUN.	199
P1652-J1850 COMMUNICATION BUS UNAUTHORIZED RESET	199
P1685-SKIM SYSTEM INVALID KEY CODE RECEIVED.	202
P1685-SKIM SYSTEM KEY COMMUNICATION TIMED OUT	203
P2120-ACC PEDAL POSITION SENSOR 1 CKT PLAUSIBILITY	205
P2120-ACC PEDAL POSITION SENSOR 1 CKT PLAUSIBILITY WITH BRAKE SWITCH.	205
P2120-ACC PEDAL POSITION SENSOR 1 CKT SIGNAL VOLTAGE TOO HIGH	205
P2120-ACC PEDAL POSITION SENSOR 1 CKT SIGNAL VOLTAGE TOO LOW	205
P2120-ACC PEDAL POSITION SENSOR 1 CKT SUPPLY VOLTAGE TOO HIGH OR LOW	205
P2125-ACC PEDAL POSITION SENSOR 2 CIRCUIT PLAUSIBILITY (WITH SENSOR 1 CIRCUIT)	205
P2125-ACC PEDAL POSITION SENSOR 2 CKT SIGNAL VOLTAGE TOO HIGH	205
P2125-ACC PEDAL POSITION SENSOR 2 CKT SUPPLY VOLTAGE TOO HIGH OR LOW	205