
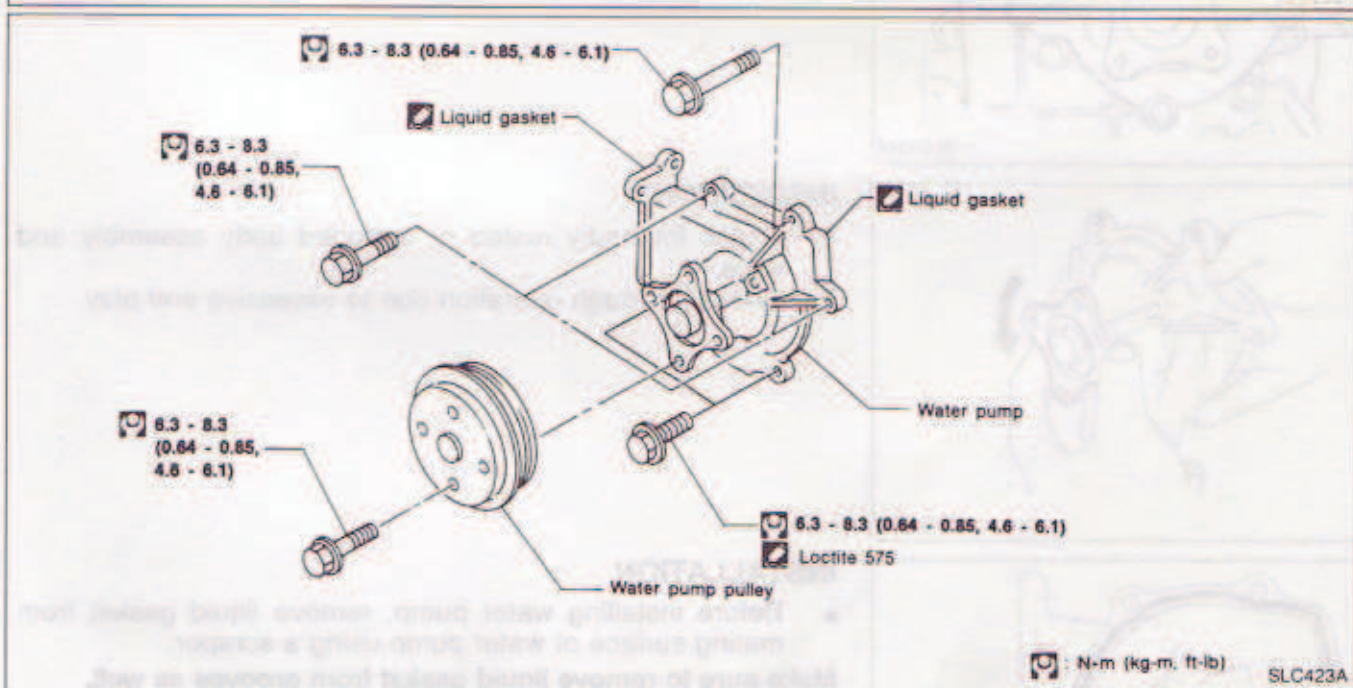


Cooling Circuit

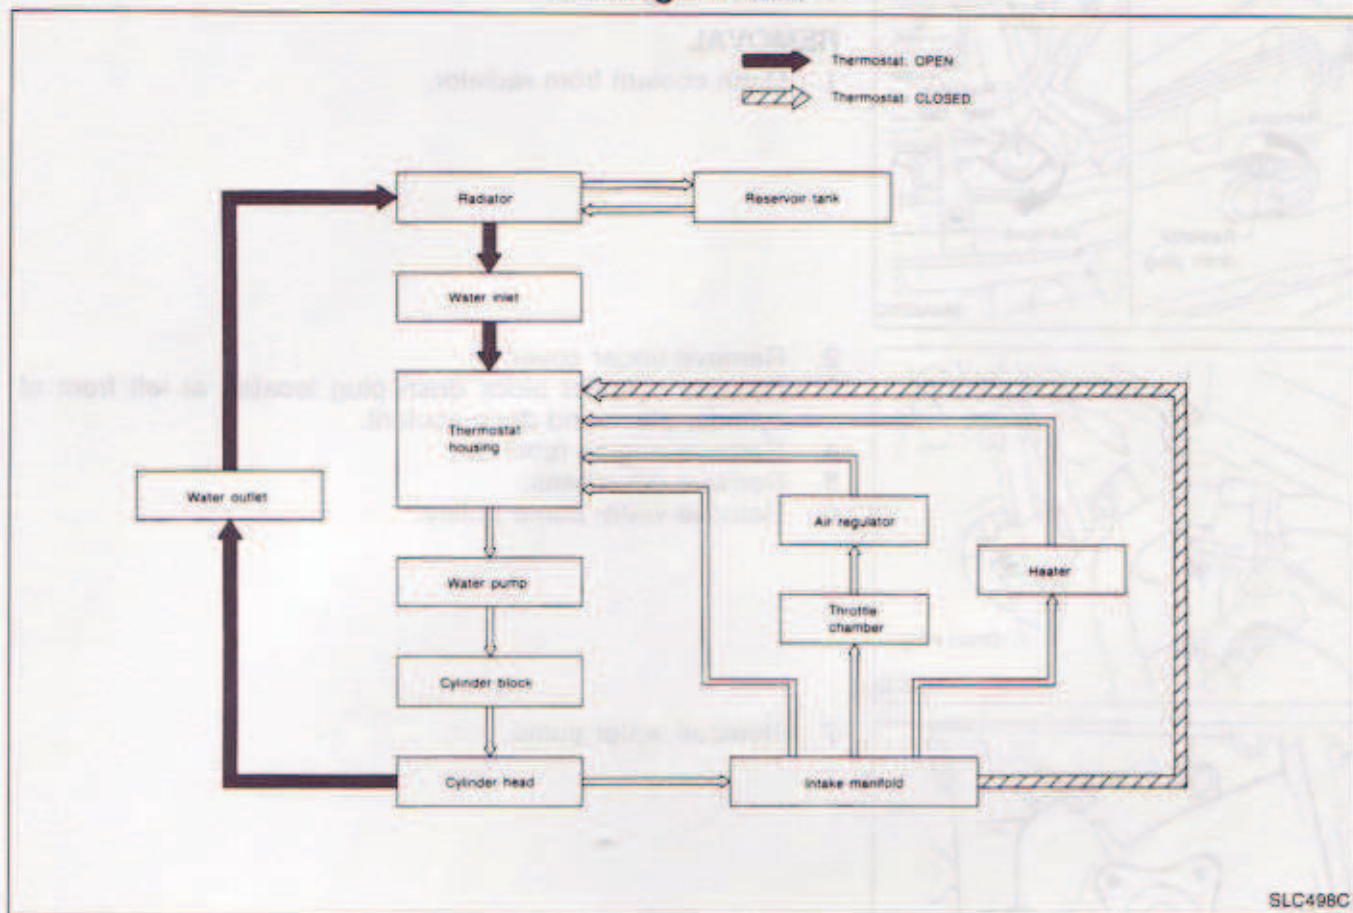

CAUTION:

- When removing water pump assembly, be careful not to spill coolant on timing chain.
- Water pump cannot be disassembled and should be replaced as a unit.
- After installing water pump, connect hose and clamp securely, then check for leaks using radiator cap tester.