
## E39 MID Service Menu

## MID Self Test

Operation of the MID can be checked through the test function sequence on the MID panel.

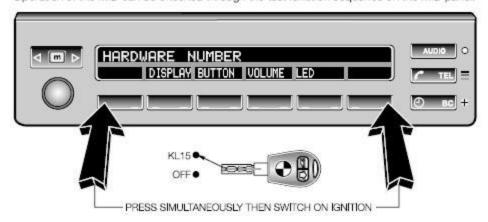

The following items can be checked:

**UNIT IDENTIFICATION** - The following information appears for approximately 3 seconds when the ignition is switched on

Hardware number
Software number
Variant index
HW 2.2
SW 10.00
V 00 E39

All other test must be started within three seconds, while the identification data is displayed. If not the MID will exit the test mode.

**DISPLAY TEST** - Activate this test by pressing the display menu button. All elements of the main and menu displays are illuminated with different check patterns.

**BUTTON TEST** - Start this test by pressing the button test menu button. All buttons on the MID have been assigned an alphabetical letter that will appear when the button is pressed.

VOLUME CONTROL TEST - This test is carried out by pressing the volume menu button and turning the volume knob. Numbers from 01 to 36 appear in the display indicating each step of the knob's rotation.

STATUS LED TEST - Activate this test by pressing the menu button. All status LEDs are illuminated.