CIRCULATE TO:SERVICE MGR. X RECEPTION X WORKSHOP X PARTS X



SUBJECT

Vehicle Battery Discharge (Diesel Only)

04/10/95 NRR/86/14/95/EN

MODEL

New Range Rover B.M.W Diesel Derivatives

AFFECTED VEHICLES
Upto 323415

LP Upto 32341 LH LJ - +

DETAIL

Reports have been received which indicate a rapid discharge of the vehicle battery on New Range Rover Diesel derivatives, over a 2 to 3 day period.

LD

Investigations have shown the cause to be the BeCM failing to enter sleep mode (partial shutdown).

ACTION REQUIRED


Upon customer complaint of the vehicle battery discharging rapidly, without obvious reason, follow the procedure detailed below.

PARTS INFORMATION

STC 3182 Resistor kit

PROCEDURE

- 1. Remove front passenger side footwell closing panel and remove the diagnostic plug from the panel.
- 2. Remove the tape from around the diagnostic harness wires.
- 3. Remove approximately 10mm of insulation from the brown wire (N) pin 16 in the diagnostic connector (see illustration opposite).
- 4. NOTE: Do not cut through the copper wire.
- 5. Remove approximately 10mm of insulation from the pink/red wire(KR) pin 7, stagger the gaps in the insulation as per the illustration.

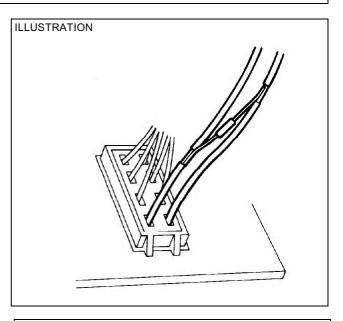

WARRANTY

Normal warranty policy and procedures apply

COMP. CODE

6U4A

SRO

86.15.89/33 Fit resistor kit 00.35 hours



SUBJECT			04/10/95
Page 2 of 2			
MODEL New Range Rove	er B.M.W Diesel Derivatives	AFFECTED VEHICLES LP Upto 323415 LH LJ LD	- +
(see illustration). 7. Solder each of not sufficient to gu 8. Tape full length ensure that the wi support for the res 9. Ensure the Becout this modification following procedur 10. Ensure the drivinterior lights are signition, switch off 11. Open the drive off the interior light 12. The message displayed on the interior light 13. After 2 minute will indicate the Becourse of the support of the interior light 15. The message displayed on the interior light 16. After 2 minute will indicate the Becourse of the support of the suppo	CM goes to sleep after carrying on, this can be achieved by the re. vers door is closed and the switched off, switch on the the ignition. ers door and leave open, switch its. 'Ignition key in' should then be instrument pack for 2 minutes. s the message should clear, this		