


# AIR CONDITIONING CUT-OFF RELAY

## (4WD with 3VZ-E E/G and A/T)

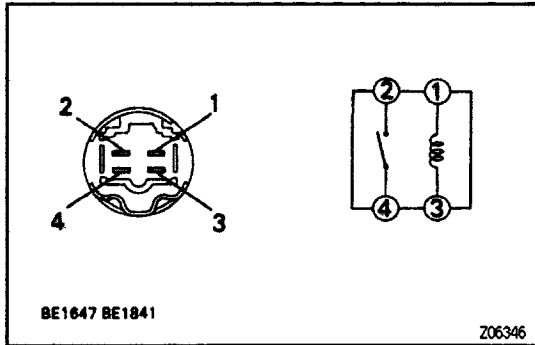

### RELAY INSPECTION

#### INSPECT A/C CUT-OFF RELAY CONTINUITY

Condition	Tester connection to terminal number	Specified value
<b>Constant</b>	<b>1 - 3</b>	<b>Continuity</b>
<b>Apply B+ between terminals 1 and 3.</b>	<b>2 - 4</b>	<b>Continuity</b>

If continuity is not as specified, replace the relay.