


# BLOWER RESISTOR

## ON-VEHICLE INSPECTION

- 1. DISCONNECT NEGATIVE (-) TERMINAL CABLE FROM BATTERY
- 2. REMOVE FRONT BLOWER RESISTOR
  - (a) Remove the glove box.
  - (b) Disconnect the connector from the blower resistor.
  - (c) Remove the 2 screws and the blower resistor.

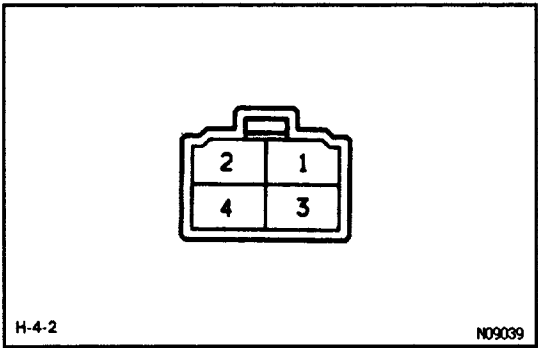


### 3. INSPECT FRONT BLOWER RESISTOR OPERATION

Condition	Tester connection to terminal number	Specified value
Constant	1 – 2 – 3 – 4	Continuity

If continuity is not as specified, replace the blower resistor.

- 4. REMOVE REAR BLOWER RESISTOR
  - (a) Remove the console box.
  - (b) Disconnect the connector from the blower resistor.
  - (c) Remove the 2 screws and the blower resistor.

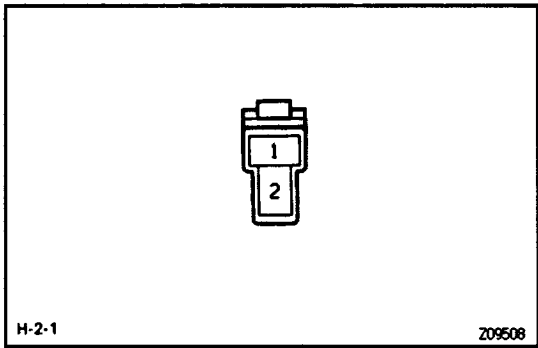

### 5. INSPECT REAR BLOWER RESISTOR OPERATION

Measure the resistance between terminals.

**Standard resistance:**

**Approx. 3.2 Ω at 25°C (77° F)**

If resistance is not as specified, replace the blower resistor.