



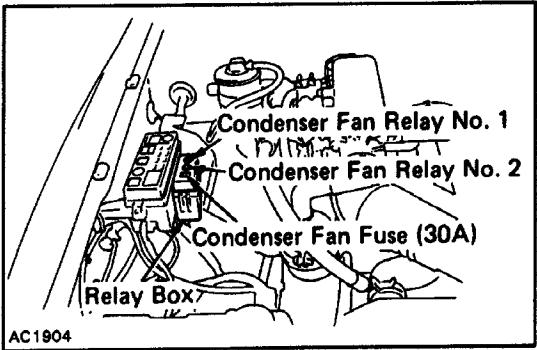

CONDENSER FAN RELAY

CONDENSER FAN RELAYS REMOVAL

1. DISCONNECT NEGATIVE (-) TERMINAL CABLE FROM BATTERY
2. REMOVE CONDENSER FAN RELAYS FROM RELAY BOX

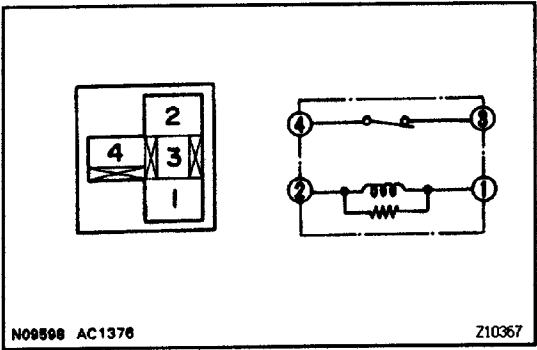


RELAYS INSPECTION

1. INSPECT CONDENSER FAN RELAY NO.1 CONTINUITY

Condition	Tester connection to terminal number	Specified value
Constant	1 - 2	Continuity
	3 - 4	
Apply B+ between terminals 1 and 2.	3 - 4	No continuity

If continuity is not as specified, replace the relay.

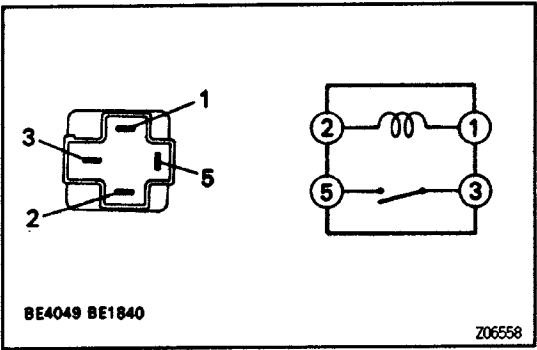

2. INSPECT CONDENSER FAN RELAY NO.2 CONTINUITY

Condition	Tester connection to terminal number	Specified value
Constant	1 - 3	Continuity
	2 - 4	
Apply B+ between terminals 1 and 3.	2 - 4	Continuity

If continuity is not as specified, replace the relay.

CONDENSER FAN RELAYS INSTALLATION

1. INSTALL CONDENSER FAN RELAYS TO RELAY BOX
2. CONNECT NEGATIVE (-) TERMINAL CABLE TO BATTERY