


RECEIVER

ON-VEHICLE INSPECTION

CHECK SIGHT GLASS, FUSIBLE PLUG AND FITTING FOR LEAKAGE

Using a gas leak tester, replace as necessary.

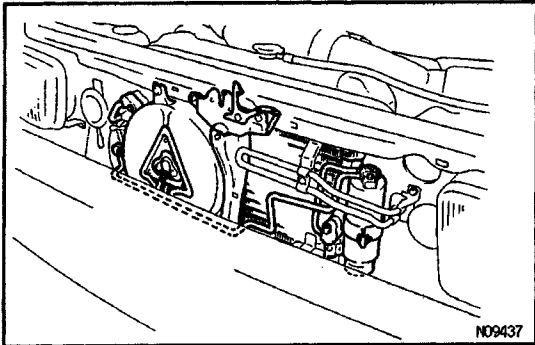

RECEIVER REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM
2. REMOVE CLEARANCE LIGHTS AND FRONT GRILLE
3. DISCONNECT 2 LIQUID TUBE FROM RECEIVER
NOTICE: Cap the open fittings immediately to keep moisture out of the system.
4. REMOVE RECEIVER FROM RECEIVER HOLDER

RECEIVER INSTALLATION

1. INSTALL RECEIVER IN RECEIVER HOLDER
HINT: Do not remove the blind plugs until ready for connection.
2. CONNECT 2 LIQUID TUBES TO RECEIVER
Torque: 8.4 N-m (55 kgf-cm, 48 in.-lbf)
3. IF RECEIVER WAS REPLACED, ADD COMPRESSOR OIL TO COMPRESSOR
Add 20 cc (0.71 fl-oz.)
Compressor oil:
ND-OIL 8 or equivalent
4. EVACUATE AIR FROM REFRIGERATION SYSTEM
5. CHARGE AIR CONDITIONING SYSTEM WITH REFRIGERANT AND CHECK FOR GAS LEAKAGE
Specified amount:
 $750 \pm 50 \text{ g (26.89} \pm 1.76 \text{ oz.)}$