



C 1

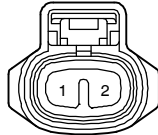


C 2 GRAY




C 5

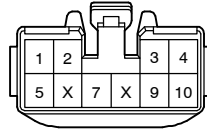


C10 (A) GRAY

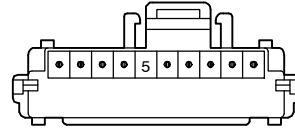

C11 (B) BLUE

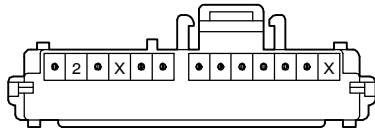


C13 (C)

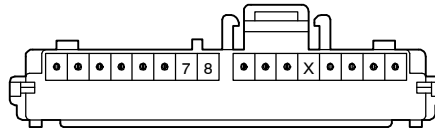

D28 BLACK




E 7 DARK GRAY

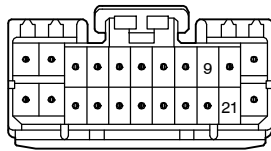

F11


(SEE PAGE 20)

J 1

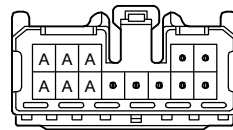


(HINT : SEE PAGE 7)

 J 2 BLUE




(HINT : SEE PAGE 7)

J 4

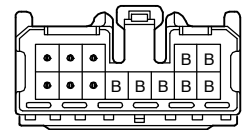


(HINT : SEE PAGE 7)


P 1 GRAY

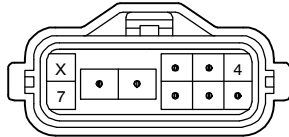


S10

 

T 2 GRAY

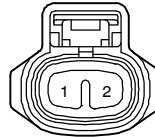


T 3 GRAY

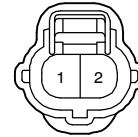

CENTER DIFFERENTIAL LOCK

*1 : CENTER DIFF. LOCK
*2 : A/T P

FROM POWER SOURCE SYSTEM (SEE PAGE 52)

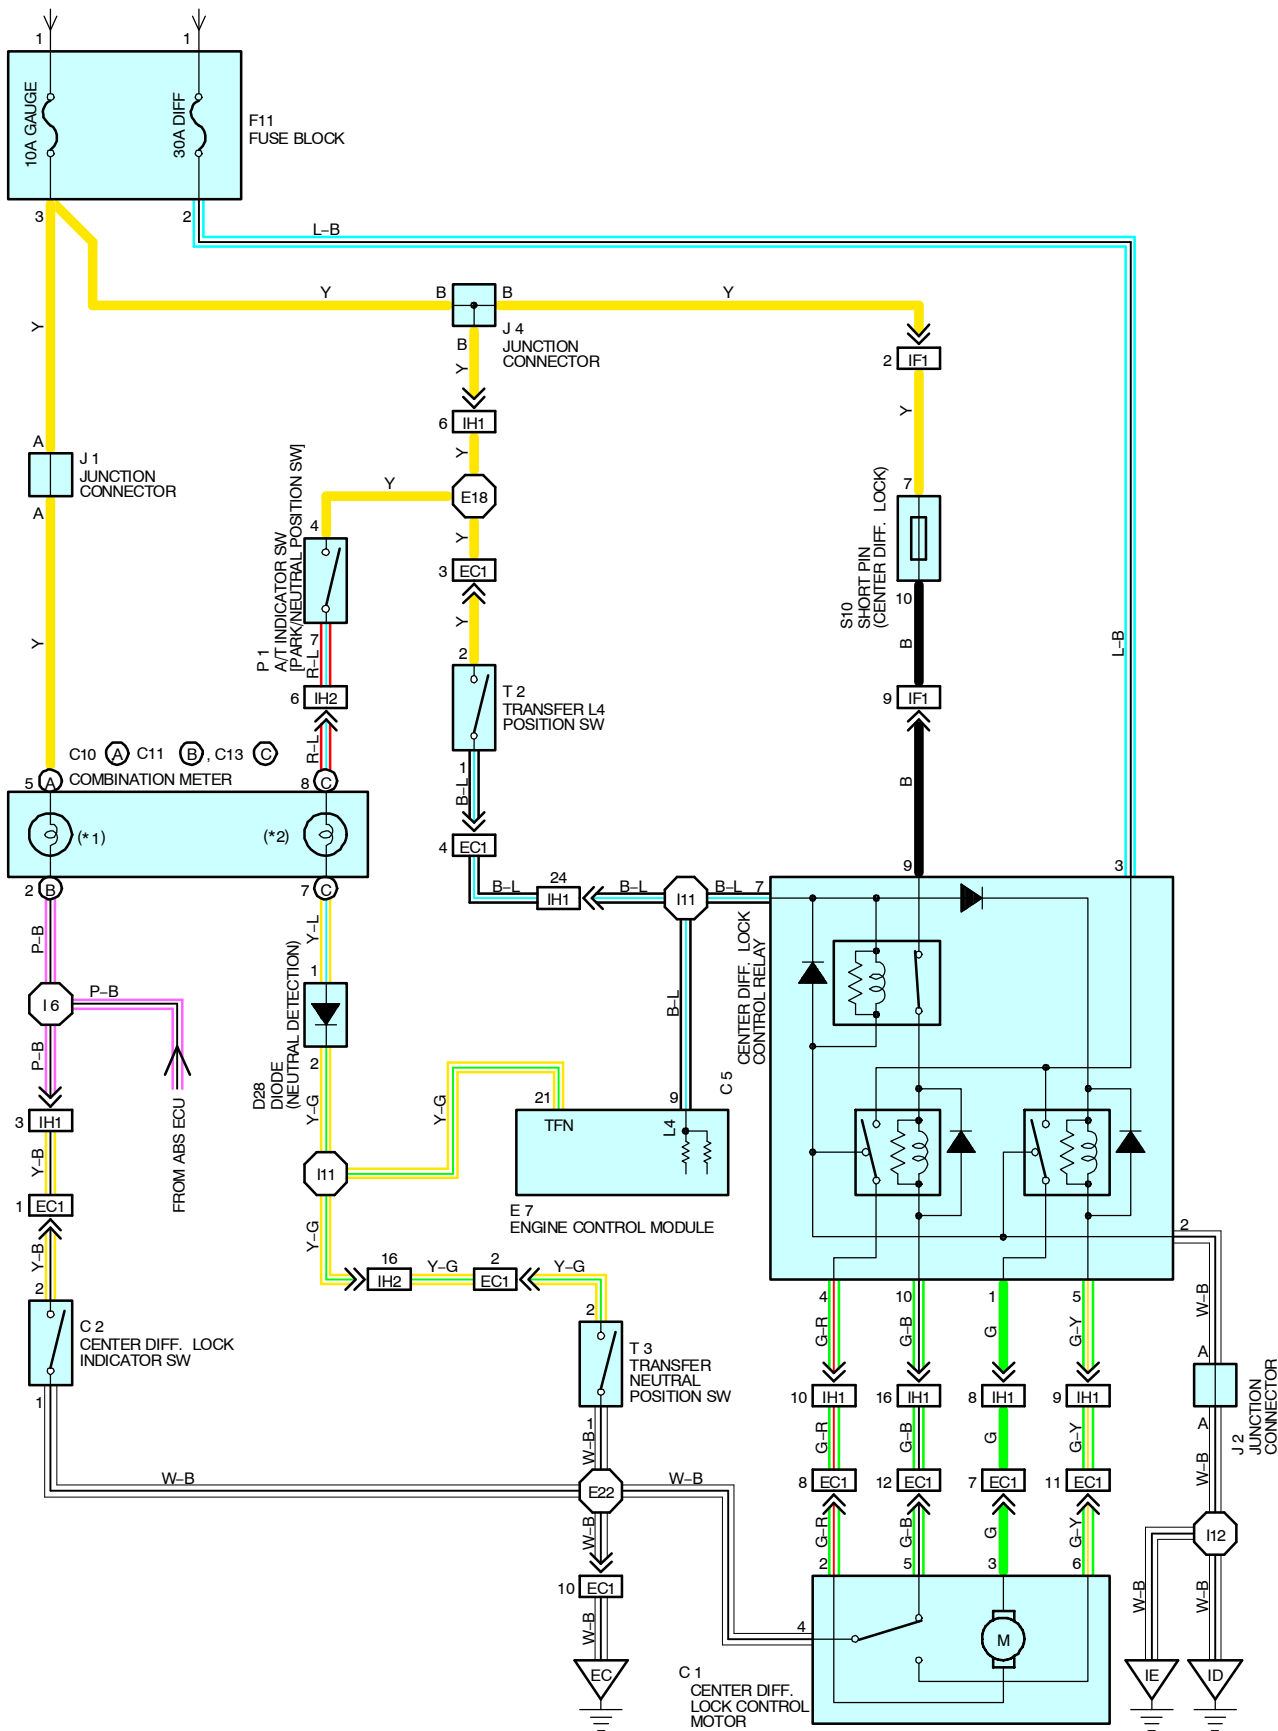

SERVICE HINTS

C5 CENTER DIFF. LOCK CONTROL RELAY

3-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT **ON** POSITION

2-GROUND : ALWAYS CONTINUITY

7-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT **ON** POSITION AND FOUR-WHEEL DRIVE CONTROL LEVER AT **L4** POSITION

: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C1	22	D28	24	P1	23
C2	22	E7	24	S10	25
C5	24	F11	25	T2	23
C10	A 24	J1	25	T3	23
C11	B 24	J2	25		
C13	C 24	J4	25		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EC1	30	ENGINE WIRE AND TRANSMISSION WIRE (NEAR THE STARTER)
IF1	32	COWL WIRE AND INSTRUMENT PANEL WIRE (INSTRUMENT PANEL CENTER)
IH1	32	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)
IH2		

: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EC	30	AIR INTAKE CHAMBER
ID	32	LEFT KICK PANEL
IE	32	RIGHT KICK PANEL

: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E18	30	ENGINE WIRE	I11	32	COWL WIRE
E22	30	TRANSMISSION WIRE	I12		
I6	32	COWL WIRE			