

SS390HF

04/02/03

ITEM	DESCRIPTION	QTY	PART NO
1	BODY - SNORKEL	1	830-133-500
2	3" AIR RAM ASSEMBLY	1	000-135-050
3	BRACKET - UPPER MOUNTING	1	830-032-000
4	BOLT - HEX - 6mm x 1.0 x 14mm	3	000-002-100
5	WASHER - FLAT - 6mm	3	000-301
7	BOLT - HEX - 6mm x 1.0 x 16mm	3	000-002
8	WASHER - FLAT - 6mm x 16mm	3	000-310
9	NUT - NYLOC - 6mm	3	000-204
10	STUD - 8mm x 1.25 x 25mm - O/L	6	000-110
11	WASHER - BODY - 8mm x 30mm	6	000-311
12	NUT - NYLOC - 8mm	6	000-205
13	RIVET - POP - 4mm x 12mm	12	000-958
14	SCREW - S/T - 4.2mm x 13mm	4	000-951
15	CLAMP - HOSE - 60/80mm	2	000-907
16	PLUG - 70mm	1	000-959-200
17	EDGING - RUBBER - 400mm	1	000-953-040
18	BRACKET - AIR CLEANER MTG (REAR)	1	830-031-500
19	BRACKET - AIR CLEANER MOUNTING	1	830-031-000
20	ADAPTOR - AIR CLEANER ENTRY	1	830-023-500
21	DUCT - CONNECTING	1	830-124-500
22	TEMPLATE	1	830-017-500
23	CLIP-PLASTIC BODY	2	000-960
24	BRACKET-SWITCH RE-LOCATION	1	830-089-500
25	RIVET POP - 4.8mm x 21mm	3	000-958-400
26	HOSE CLAMP - SIZE 48 (BLACK)	1	000-918/B

Manufactured by Safari Automotive Technologies Pty Ltd

73 Merrindale Drive, South Croydon Victoria 3136 Australia Tel: +61 3 9761 7244 Fax: +61 3 9761 7665


www.safarismorkel.com

ABN 88 071 262 756

WARNING!!

**IT IS AN INSTALLER
RESPONSIBILITY TO VERIFY
ALL COMPONENTS, AND
PARTICULARLY THE
TEMPLATE ARE CORRECT,
BEFORE STARTING ANY PART
OF THE SNORKEL
INSTALLATION.**

**(CHECK TEMPLATE AGAINST
SNORKEL BODY)**

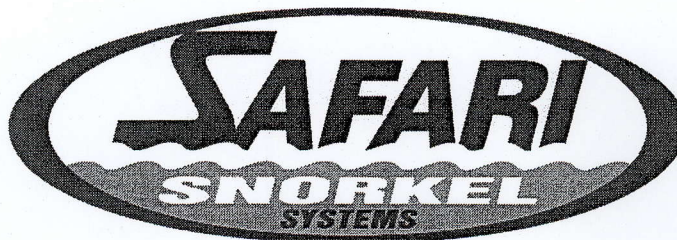

SS390HF

LANDROVER DISCOVERY (300 SERIES)
TDI/V8

TURBO DIESEL (2.5L)
V8 PETROL (3.9L)

Fitment to:	Left hand side	
Fitting time:	Approximately 120 minutes	
Comments :	Suits TDI/V8 with or without A.B.S.	
Special Tools:	86mm holesaw	89mm holesaw
	Pop rivet gun	Air hacksaw
	Unibit Step Drill	

Instructions:


1. Remove the left front guard liner and air cleaner assembly. On petrol vehicles the air flow meter and rubber duct from the inlet manifold must also be removed.
2. Locate the template on the upper rear corner of the guard and mark the hole positions using a felt pen. Remove the template and drill a 4mm pilot hole for each position. Open the 6 mounting holes to 16mm using a step drill. Drill the main hole to 86mm using a holesaw. Deburr all holes to leave a clean edge.
3. To locate the inner hole, measure back from the headlight support panel 450mm, then down from the bottom edge of the guard flange 60mm. This hole should be located in the centre of the round bulge in the side of the engine bay. Drill a 4mm pilot hole, then open the hole out using a 89mm holesaw. Deburr to leave a clean edge.
4. Paint all holes using a suitable touch up paint.
5. Insert the mounting studs into the back of the snorkel. Bolt the upper mounting bracket to the top of the snorkel. Position the snorkel body on the vehicle and secure using 8mm nyloc nuts and body washers supplied. Mark holes for "A" pillar

Manufactured by Safari Automotive Technologies Pty Ltd


73 Merrindale Drive, South Croydon Victoria 3136 Australia Tel: +61 3 9761 7244 Fax: +61 3 9761 7665

www.safarisnorkel.com

ABN 88 071 262 756

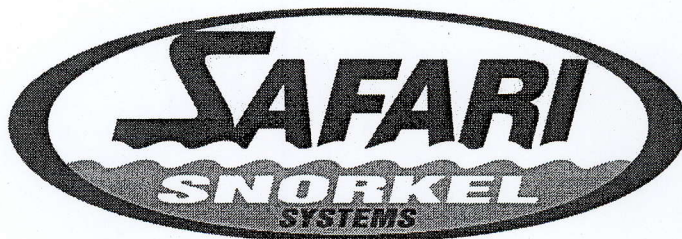

- bracket remove bracket and drill holes. Deburr and paint holes. Use the 4mm pop riverts to fasten bracket to "A" pillar. Position the air ram on the top of the snorkel body and tighten the clamp.
6. Remove the air cleaner lid, mounting plugs and filter element from the air cleaner assembly. Locate the adaptor casting on the lower LHS front corner of the air cleaner body and mark the main hole position using a scribe. Remove front three ribs from air cleaner body to obtain flat surface. Use an air hacksaw to cut out the hole. Smear silicone sealant on the sealing surface of the adaptor casting then fasten it to the cleaner body using 4mm pop rivets.
 7. Cut off the 2 locating pins on the front of the air cleaner body. Locate the large mounting bracket on the front face of the body and fasten in place with 4mm pop rivets.
 8. Remove air filter inlet by removing flange clip inside air filter housing and pull out air inlet extension.
 9. Use the 70mm blank off plug to fill the original intake hole. The plug should be sealed in place using silicone and fastened using 2 x item No. 14. The drain holes in the bottom of the air cleaner body should also be sealed using silicone.
 10. Position the air cleaner body in the vehicle. The pins on the front mounting bracket locate in the original mounting bushes. When in the correct position, the pins should push approximately 1mm through the bushes.
 11. Mark the new rear mounting hole position through the large hole in the bottom of the air cleaner onto the inner guard. Remove the air cleaner and drill the hole to 12.5mm.
 12. Refit the mounting plugs into the air cleaner body then relocate the air cleaner body into the vehicle. Fit the rear mounting bracket to the second mounting plug. Mark the 3, bracket mounting hole positions on the inner guard. Remove the air cleaner body from the vehicle and drill the 3 holes to 7mm. Bolt the rear bracket in place using item Nos. 5, 7, 8 and 9.
 13. Fit the rubber edging around the inner hole. Smear silicone to the inside of connecting duct at both ends. Slide the long end of the connecting duct onto the snorkel snout and secure with a 60/80 clamp.

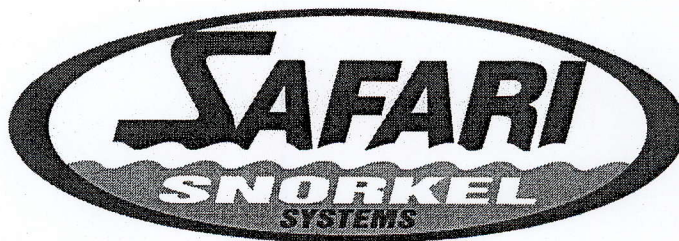

14. Re-assemble the air cleaner, then position it in the vehicle. Fasten the end of the connecting duct to the adaptor casting using a 60/80 clamp.

N.B. : PETROL VEHICLES

The rubber duct for between the air flow meter and inlet manifold will have to be shortened as shown in diagram.




15. Using bracket supplied in kit to relocate bonnet switch as shown in diagram, mark holes with a felt pen and drill 2 x 8mm holes. Fit nylon inserts and mount bracket. Reposition ABS brake pipe to clear mounting bracket.
16. Refit guard liner and use 3 large headed pop rivets supplied to fasten liner.

Manufactured by Safari Automotive Technologies Pty Ltd

73 Merrindale Drive, South Croydon Victoria 3136 Australia Tel: +61 3 9761 7244 Fax: +61 3 9761 7665

www.safarismorkel.com

ABN 88 071 262 756

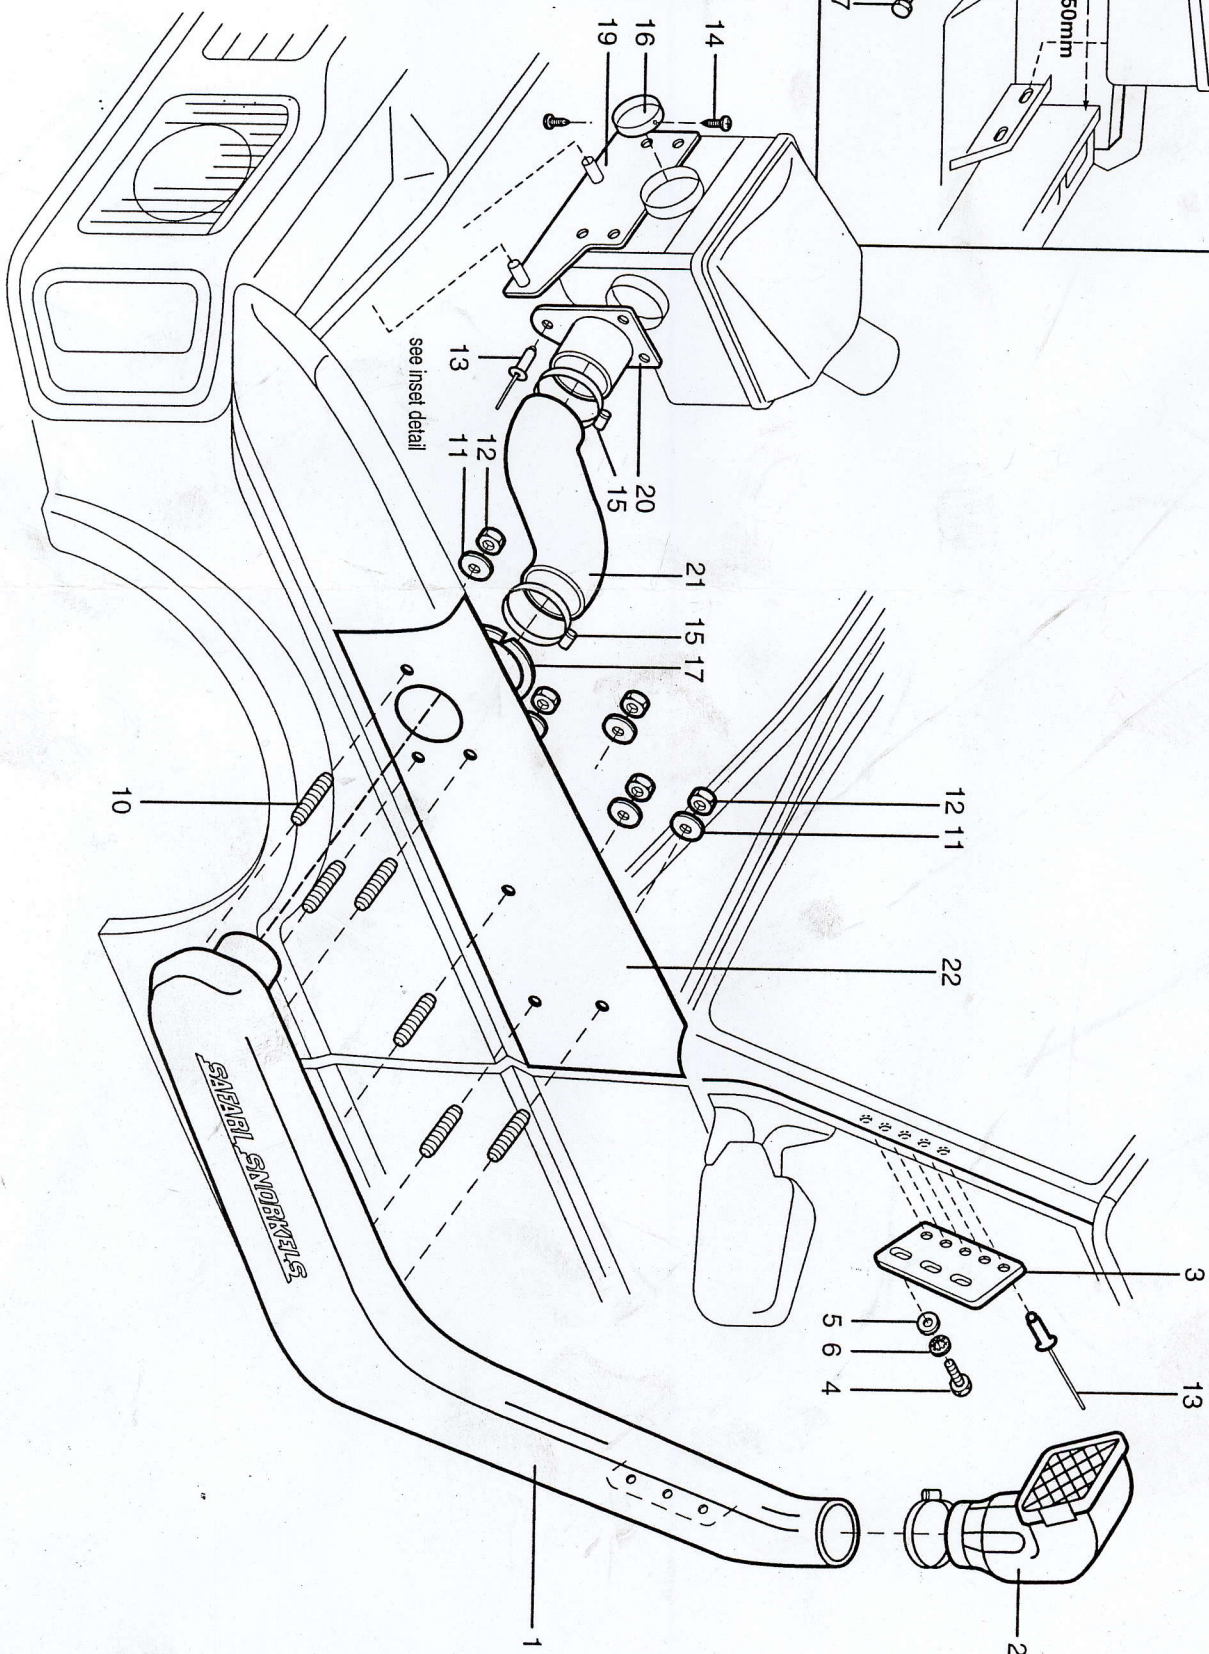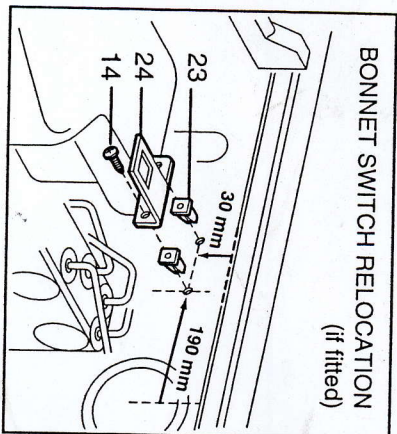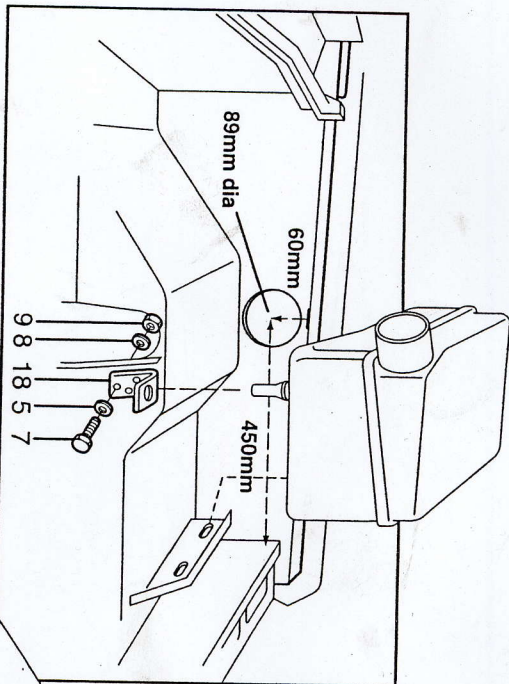

Model No:

SS 390 HF

18/12/97

Description:

LANDROVER DISCOVERY 3.9 V8

Sub Assembly: **SAFARI SNORKEL**

SAFARI
SNORKELS

