



(CONTINUED)


CAV	CIRCUIT	FUNCTION
53	K153 16OR	SHUTOFF FEED
54	—	—
55	K255 20WT/DG	PEDAL POSITION SENSOR
56	—	—
57	K6 20VT/WT	5 VOLT SUPPLY
58	—	—
59	G55 20OR/BK	ENGINE DISABLE SIGNAL
60	—	—
61	D21 20PK	SCI TRANSMIT
62	—	—
63	K156 20GY	FUEL TEMPERATURE SENSOR SIGNAL
64	—	—
65	K151 20WT	LOW IDLE POSITION SWITCH
66	—	—
67	—	—
68	A142 16DG/OR	AUTO SHUTDOWN RELAY OUTPUT

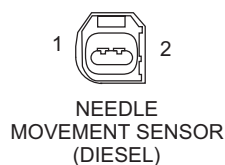

CAV	CIRCUIT	FUNCTION
1	K67 18BR/BK	NEEDLE MOVEMENT SENSOR B(+)
2	K68 18LG/YL	NEEDLE MOVEMENT SENSOR B(-)

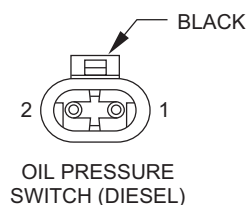

CAV	CIRCUIT	FUNCTION
1	K167 20BR/YL	SIGNAL GROUND OIL PRESSURE SWITCH
2	G60 20GY/YL	OIL PRESSURE GAUGE SENDING UNIT

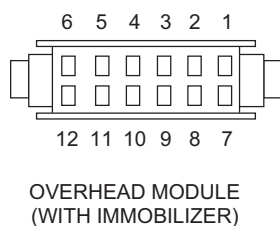

CAV	CIRCUIT	FUNCTION
1	M2 20YL	DOOR AJAR
2	M1 20PK	COURTESY LAMPS
3	Z1 20BK	POWER GROUND
4	G38 20GY	IMMOBILIZER TELLTALE
5	P55 20DB	UNLOCK CONTROL
6	D1 20VT/BR	CCD BUS(+)
7	—	—
8	F1 20DB/GY	FUSED BATTERY SIGNAL
9	Z2 20BK/LG	LOGIC GROUND
10	X3 20BK/RD	HORN RELAY
11	P59 20LB/RD	LOCK CONTROL
12	D2 20WT/BK	CCD BUS(-)