


FUSE AND RELAY INFORMATION E2JA0010

PASSENGER COMPARTMENT JUNCTION BLOCK

LAYOUT

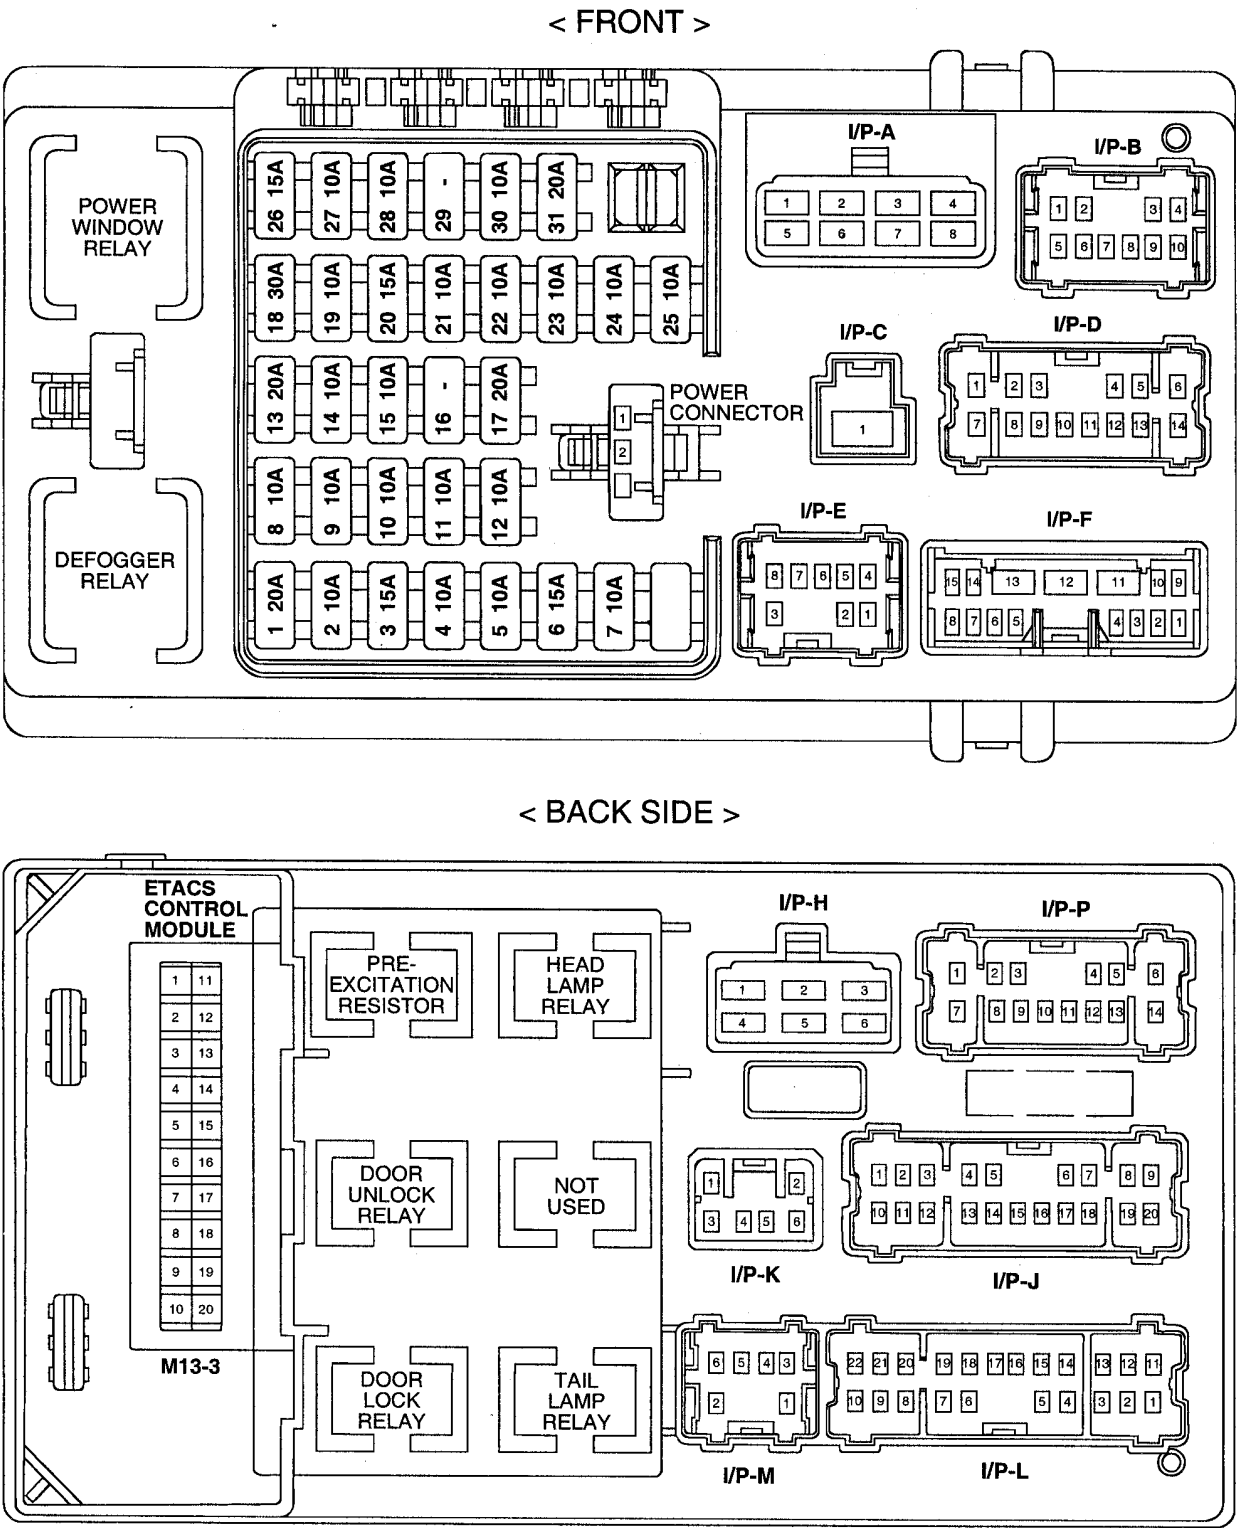

## CIRCUIT

| FUSE | CIRCUIT<br>AMPERAGES | CIRCUIT PROTECTED                                                    |
|------|----------------------|----------------------------------------------------------------------|
| 1    | 20A                  | Cigarette lighter & power outlet                                     |
| 2    | 10A                  | Audio                                                                |
| 3    | 15A                  | Digital clock, rear power outlet, seat belt tension reducer solenoid |
| 4    | 10A                  | Multifunction switch                                                 |
| 5    | 10A                  | Head lamp relay, head lamp leveling switch                           |
| 6    | 15A                  | Seat warmer switch                                                   |
| 7    | 10A                  | Rear wiper motor control                                             |
| 8    | 10A                  | Rear window defogger, power outside mirror                           |
| 9    | 10A                  | A/C control, sunroof relay                                           |
| 10   | 10A                  | Rear fog lamp relay                                                  |
| 11   | 10A                  | Instrument cluster, room lamp, door lamp                             |
| 12   | 10A                  | ETACS control module, audio, digital clock, siren, multimeter        |
| 13   | 20A                  | Amplifier speakers                                                   |
| 14   | 10A                  | Stop lamp switch, data link connector, multipurpose check connector  |
| 15   | 10A                  | Hazard lamp, immobilizer control module                              |
| 16   | -                    | (Not used)                                                           |
| 17   | 20A                  | Sunroof relay                                                        |
| 18   | 30A                  | Rear window defogger                                                 |
| 19   | 10A                  | ETACS control module, pre-excitation resistor, instrument cluster    |
| 20   | 15A                  | SRS control module                                                   |
| 21   | 10A                  | ECM(V6), PCM(I4 with A/T), ECM(I4 with M/T)                          |
| 22   | 10A                  | Instrument cluster                                                   |
| 23   | 10A                  | G-Sensor, ABS control module, air bleeding connector                 |
| 24   | 10A                  | Hazard switch                                                        |
| 25   | 10A                  | Transaxle range switch, vehicle speed sensor, TCM                    |
| 26   | 15A                  | Door lock/unlock relay                                               |
| 27   | 10A                  | Turn signal lamp, license lamp                                       |
| 28   | 10A                  | Turn signal lamp, fog lamp relay, switch illuminations               |
| 29   | -                    | (Not used)                                                           |
| 30   | 10A                  | Radiator fan relay, condenser fan relay                              |
| 31   | 20A                  | Front wiper motor, wiper relay, washer motor                         |